

Precision instrumentation
and monitoring solutions
for the food industry.




It's Fast
It Folds
It Bleeps...
It's Pocketherm

Fast, folding pocket thermometer with audible temperature alert

Pocketherm

Simple to use folding pocket thermometer

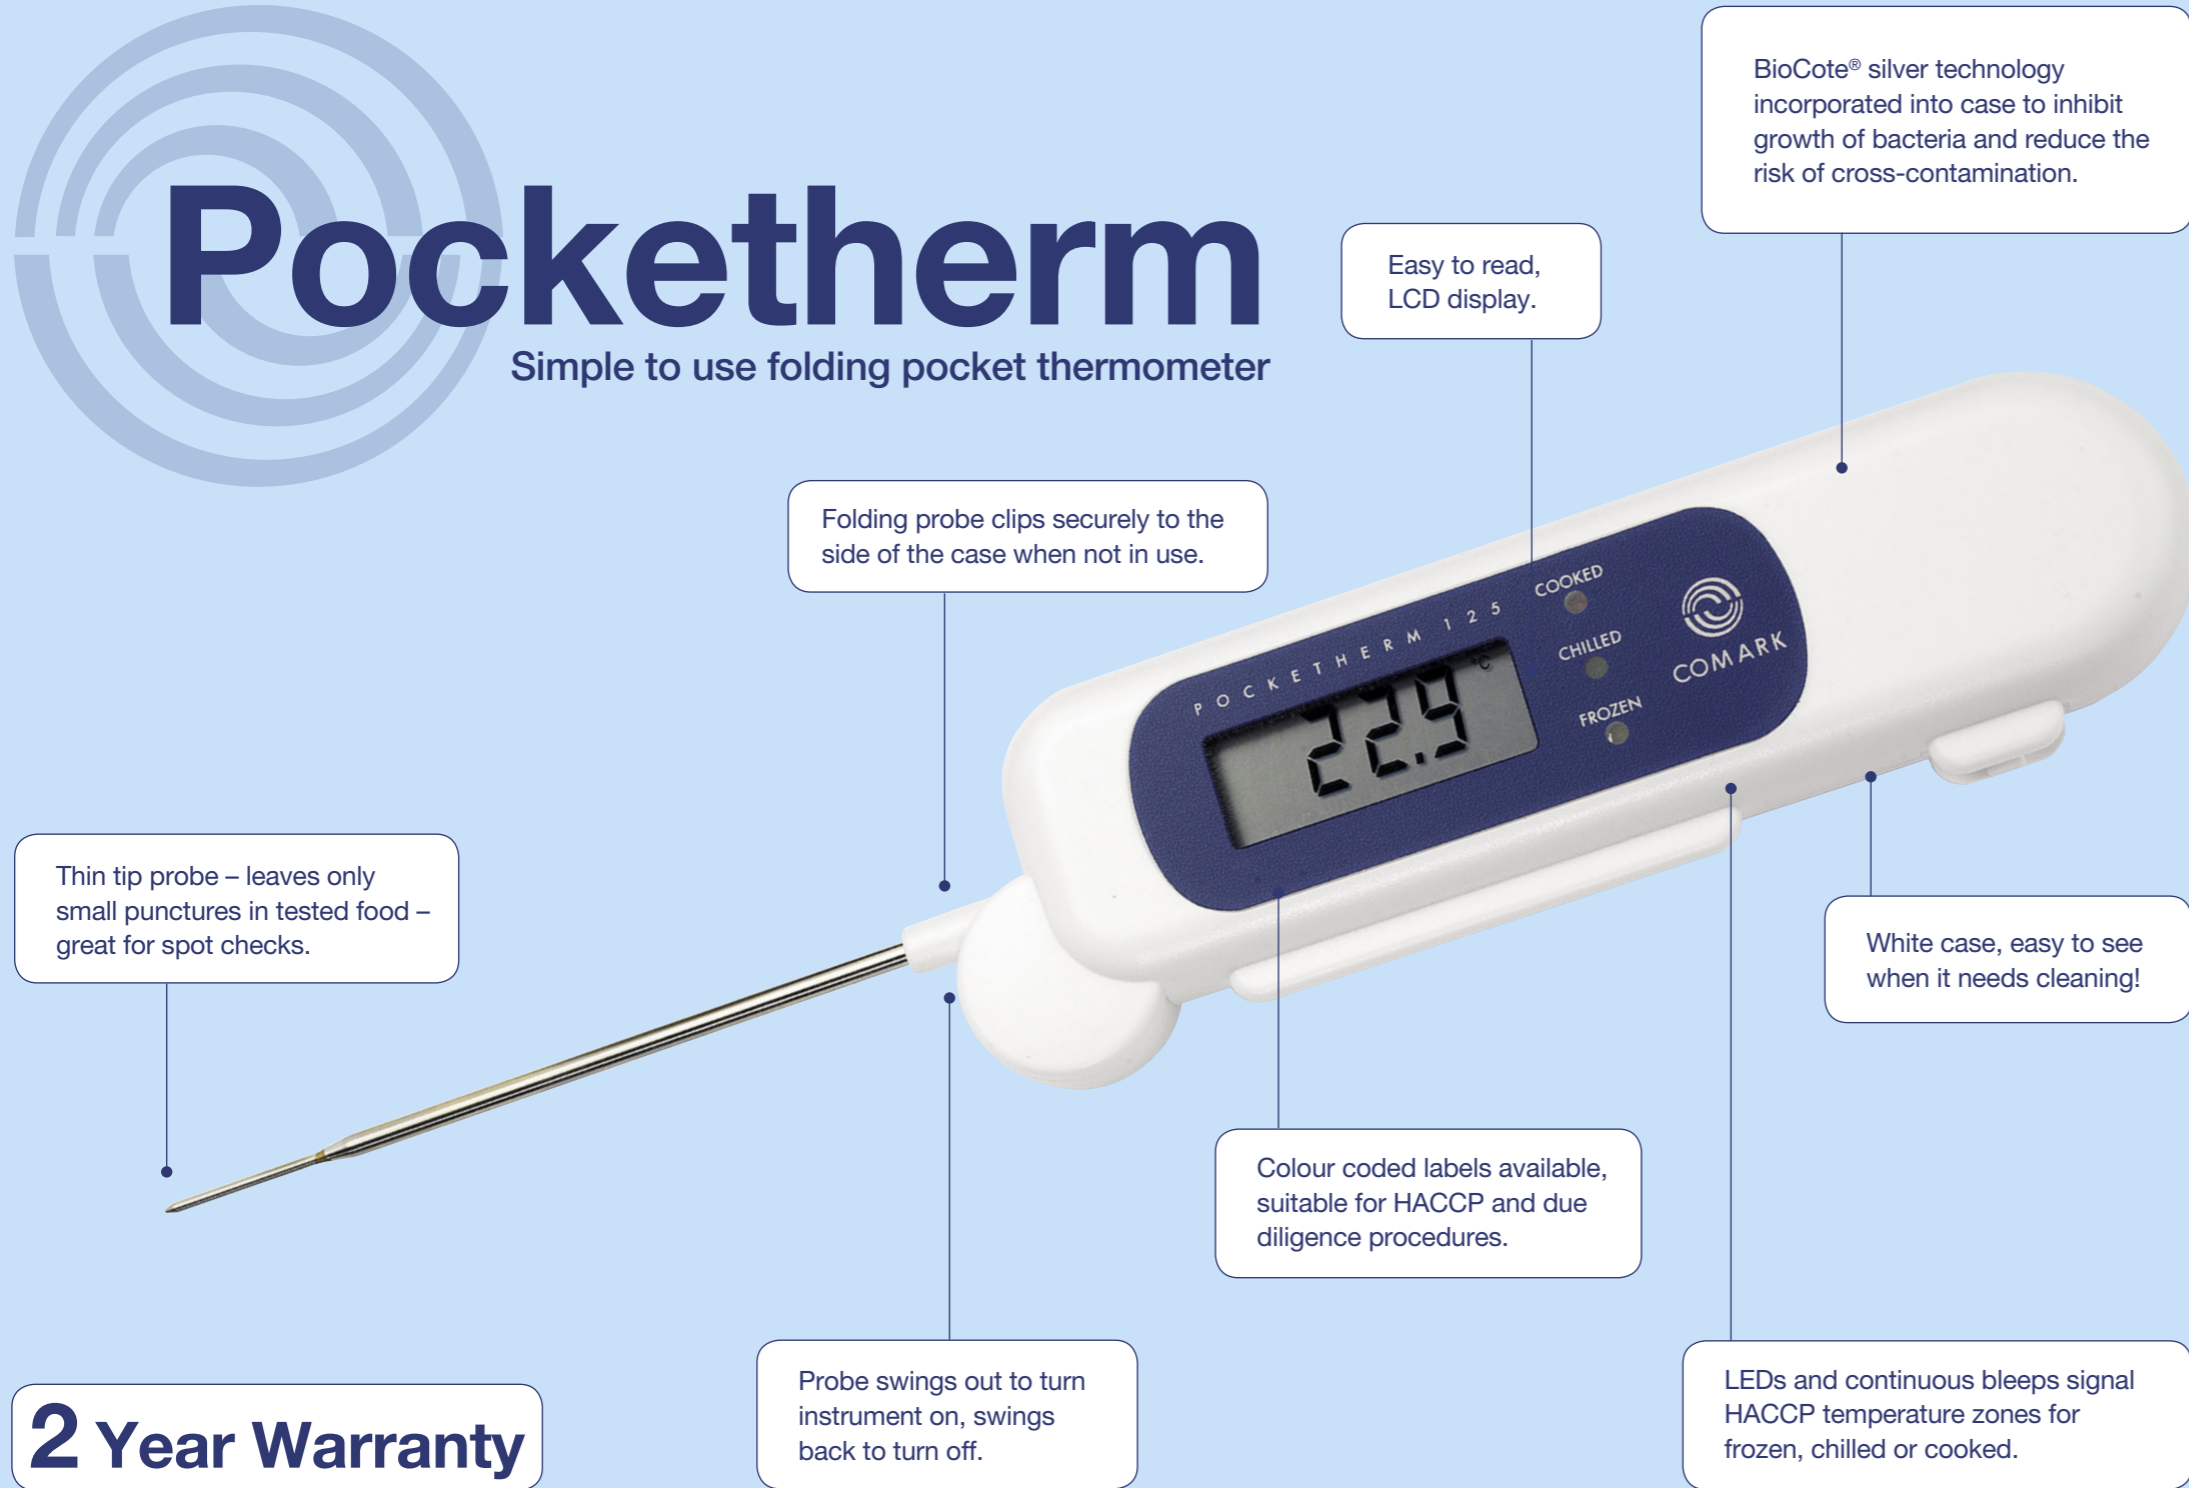

2 Year Warranty

It's Neat

And fully self-contained with a built-in probe.

It's Fast

One of the fastest folding thermistor thermometers on the market.

It's Loud

Internal buzzer informs you when the temperature zones are reached. Great for busy kitchens.

It has LEDs

For error free indication of temperature zone.

It's Quick

Stepped probe for faster response.

It's Compact

To fit in any pocket or bag.

Safe and convenient, pocket thermometer with integral folding probe with instant visual and audible indication of correct frozen, chilled and cooked temperature zones.

Comark uses BioCote®, the only antimicrobial solution to be awarded HACCP International Certification, to provide an important extra level of defence against cross-contamination.

Choose the colours you need to suit your HACCP procedures

-  Blue - Fish
-  Green - Salad
-  Red - Raw Meat
-  Orange - Cooked Vegetables
-  Yellow - Cooked Meat



We also offer a range of P125 Pocketherm Accessories.

PW70T Small Tub of 70 Probe Wipes.
 PW200T Large Tub of 200 Probe Wipes.
 AC315 Soft Pouch.



P125 Pocketherm Specification

Sensor Type	Thermistor
Measurement Range	-40°C to +125°C
Operating Range	Temperature -20°C to +50°C Humidity 10% to 90% non-condensing
Scales	°C
Resolution	0.1°
Accuracy at +23°C	±0.5°C, -20°C to +70°C
Battery Type	PP3 9V
Battery Life	600 hours minimum (continuous)
LED Indication	Yellow - frozen - below -18°C Green - chilled - 0°C to +5°C Red - cooked - 75°C and above
Auto Switch Off	After 60 minutes
Dimensions	Case L 170mm x W 52mm x D 24mm Probe L 110mm
Weight	140gms with battery

Selected Comark thermometers, probes and data loggers have BioCote's silver technology incorporated into instrument cases and probe handles at the time of manufacture. The antimicrobial finish inhibits the growth of bacteria, reducing the risk of cross-contamination and infection in the environment.

BioCote® has been officially recognised for its benefits within the food industry with HACCP International Certification. HACCP International Certification supports organisations that demonstrate food safety excellence in non-food products that are designed for, or are commonly used in, the food industry.

BioCote® is the only antimicrobial solution to be awarded HACCP International Certification.



2 Year Warranty

To contact us

Comark Instruments
 Bury Mead Road
 Hitchin
 Hertfordshire
 SG5 1RT
 United Kingdom

Tel: **0844 815 6599**
 Fax: **0844 815 6598**
 Email: sales@comarkinstruments.com
www.comarkinstruments.com

Warranty statement

All Comark instruments have a minimum one year warranty unless otherwise stated. The warranty period for temperature probes is for six months and all other probes and electrodes are unwarranted because the conditions of use are beyond our control.

The Comark warranty covers manufacturing defects and component failures on all products returned to Comark premises and applies

worldwide. The warranty does not affect your statutory rights. In line with our policy of continuous development we reserve the right to alter any product specifications without notice.

All products are covered by our Quality Management System which is compliant with BS EN ISO 9001:2008 for the design, manufacture, supply, service, repair and recalibration of electronic measuring instruments and equipment.

